

# Jak udělat upgrade LiftNet centrální jednotky pokud Service Tool nedetekuje verzi firmware

1. Spusťte aplikaci a získejte spojení s centrální jednotkou LiftNet (Obr. 1).



#### Obr. 1

🕑 Service Tool		
Configuration Dev	vice Tools About	
	S C C P P K K K	
Connected Device	no device	
HW Device	LiftNet PSTN	
Firmware	Select one of connected devices please:	
	LiftNet PSTN HW rev. 2 (S/N 15-3005-0016) Cancel Refresh List OK	

#### Obr. 2



2. Nyní obdržíte varování: Vybraná verze firmwaru se neshoduje s verzí firmwaru, který je v databázi této verze Service Tool (Obr. 3).

🕑 Service Tool		
Configuration De	evice Tools About	
	E	
Connected Device	LiftNet PSTN HW rev. 2 (S/N 15-3005-0016)	
HW Device	LiftNet PSTN HW rev. 2	
Firmware	·	
	Firmware detection    Warning: selected firmware version does not match the firmware version of device.	

Obr. 3

3. Na (Obr. 4) můžete vidět, že Service Tool nedetekoval aktuální firmware, který je nyní nahrán v LiftNet centrální jednotce.

🕑 Service Tool		
Configuration De	evice Tools About	
🕑 🗭	SI 🕒 🕑 🥟 🎼 🎊 💱	
Connected Device	LiftNet PSTN HW/ rev. 2 (S/N 15-3005-0018	
HW Device	LiftNet PSTN HW rev. 2	
Firmware	Detect Firmware	
	Detect firmware	
	The list of firmwares does not contain firmware obtained from device.	
	ОК	

#### Obr. 4



## 4. Musíte nahrát firmware přímo do procesoru (Obr. 5).

😢 Service Tool		- 🗆 🗙
Configuration De	evice Tools About	
V 🚿	Read Data From DataFlash Write Data Into DataFlash Write Firmware Into Processor	
Connected Device	LiftNet PS IN HW rev. 2 (5/N 15-3005-0016)	
HW Device	LiftNet PSTN HW rev. 2	
Firmware	▼ Detect Firmware	
		.::
Obr. 5		

🕑 Service Tool		- 🗆 🗙
Configuration De	vevice Tools About	
🕑 🔀	E 🕒 🕐 🎤 🎇 💅	
Connected Device	LiftNet PSTN HW rev. 2 (S/N 15-3005-0016)	
HW Device	LiftNet PSTN HW/ rev. 2	
Firmware	✓ Detect Firmware	
	Write Firmware Into Processor 🛛 🔀	
	File with firmware:   Browse   Cancel	
		.::





### 5. Zvolte firmware (Pic. 7).

P Service Tool			
Configuration	Otevřít	28	
	Oblast hledání:	🖻 FW 💌 🦻 📂 🛄 •	
Connected Devic HW Device Firmware	Poslední dokumenty Plocha Plocha	Image: SF_LNZAP_A_1_4_0_20_3.hex Image: SF_LNZAP_B_1_6_0_22_2.hex   Image: SF_LNZAP_A_1_4_2_20_5.hex Image: SF_LNZAP_B_1_6_1_22_6.hex   Image: SF_LNZAP_A_1_4_3_20_6.hex Image: SF_LNZAP_B_1_7_1_23_2.hex   Image: SF_LNZAP_A_1_4_4_20_7.hex Image: SF_LNZAP_B_1_7_2_23_3.hex   Image: SF_LNZAP_A_1_5_0_21_1.hex Image: SF_LNZAP_B_1_5_0_24_3.hex   Image: SF_LNZAP_A_1_5_1_21_2.hex Image: SF_LNZAP_B_1_6_1_24_4.hex   Image: SF_LNZAP_B_1_5_2_21_3.hex Image: SF_LNZAP_B_1_6_1_24_4.hex   Image: SF_LNZAP_B_1_5_3_21_4.hex Image: SF_LNZAP_B_1_5_2_24_5.hex   Image: SF_LNZAP_B_1_5_6_21_8.hex Image: SF_LNZAP_B_1_5_6_21_8.hex   Image: SF_LNZAP_B_1_5_7_21_10.hex Image: SF_LNZAP_B_1_5_9_21_13.hex   Image: SF_LNZAP_B_1_5_9_21_13.hex Image: SF_LNZAP_B_1_5_9_21_14.hex	
	Tento počítač		
		Název souboru: SF_LNZAP_B_1_8_2_24_5.hex	
	Místa v síti	Soubory typu: Firmware (*.hex, *.txt) Storno	
l	<u></u>		
			.::

#### Obr. 7

#### 6. Zapište firmware.

😢 Service Tool		. 🗆 🗙
Configuration De	evice Tools About	
🖉 <u></u>	SE 🕒 🥟 🌮 🎇 💏	
Connected Device	LiftNet PSTN HW rev. 2 (S/N 15-3005-0016)	
HW Device	LiftNet PSTN HW rev. 2	
Firmware	→ Detect Firmware	
	Write Firmware Into Processor Image: Comparent technology   File with firmware: Browse   C:\Program Files\2N Telekomunikace Browse   Cancel Write firmware	

### Obr. 8



🕑 Service Tool 📃	
Configuration Device Tools About	
🕑 ጅ 🗐 🖳 🖤 🌮 🎼 💕 😢	
Connected Device LiftNet PSTN HW rev. 2 (S/N 15-3005-0016)	
HW Device LiftNet PSTN HW rev. 2	
Firmware	
Stop	



🕑 Service Tool		
Configuration De	Device Tools About	
🕑 🔀	SI 🕒 🕒 🥟 🎼 💕 🔮	
Connected Device	LiftNet PSTN HW rev. 2 (S/N 15-3005-0016)	
HW Device	LiftNet PSTN HW/ rev. 2	
Firmware	▼ Detect Firmware	
	Write Firmware Into Processor	
	Firmware was successfully written and verified.	
	ОК	
		:





7. Nyní jste úspěšně nahráli firmware do procesoru v pohotovostním režimu (zkrácená verze bez firmwaru pro hlásky). Tudíž musíte přehrát firmware, příklad (Obr. 11).

Configuration Device Tools About
Connected Device LiftNet PSTN HW rev. 2 (S/N 15-3005-0016), Fw(1.8.2)
Connected Device LiftNet PSTN HW rev. 2 (S/N 15-3005-0016), Fw(1.8.2)
HW Device LiftNet PSTN HW rev. 2
Firmware FW 1.8.2



🕑 Service Tool			
Configuration De	evice Tools	About	
V 🚿	C L	i 🖳 🥐 🎇 💕 🔛	
Connected Device	LiftNet PSTN	Perform Device Upgrade	
HW Device Firmware	LiftNet PSTN FW 1.8.2	Choose target firmware version:	
		Choose language localization:	
		Would you like to preserve current device configuration?   Preserve device configuration   Reset device configuration   Cancel	
			.::

#### Obr. 12



# 8. Vyčkejte dokud neproběhne zápis firmware (Obr. 13).

🕑 Service Tool						- OX)
Configuration De	vice Tools	About				
S (*	E L		i 🖉 🖗 🕵 🖉	<del> </del>		
Connected Device	LiftNet PSTN	HW rev. 2 (S/N 1	15-3005-0016), FW 1.8.2			
HW Device	LiftNet PSTN	HW rev. 2				
Firmware	FW 1.8.2		▼ Detect Firm	ware		
Telephone Numbers Dialling and Communic Commands and Passw Audio Parameters	ation Rules ords	Cr	eating backup of user numbers and messages		Range	
Call Progress Tones D Timing Voice Messages Checking Call Other Parameters	etection	- (===	Stop			
		016	ALARM button memory 6			
		018	Count of automatic dialling cycles for A	3	0-9	
		071	Checking call memory 1			
		072	Checking call memory 2			
		073	Checking call memory 3			
		074	Checking call memory 4			
		075	Checking call memory 5			
		076	Checking call memory 6			
		Lozo	Count of outomatic dialling oucles for o	10	100	

Obr. 13