


How to upgrade eCPU firmware

Type the Enhanced CPU (eCPU) IP address into the web browser. On the home page you will see your current firmware version.

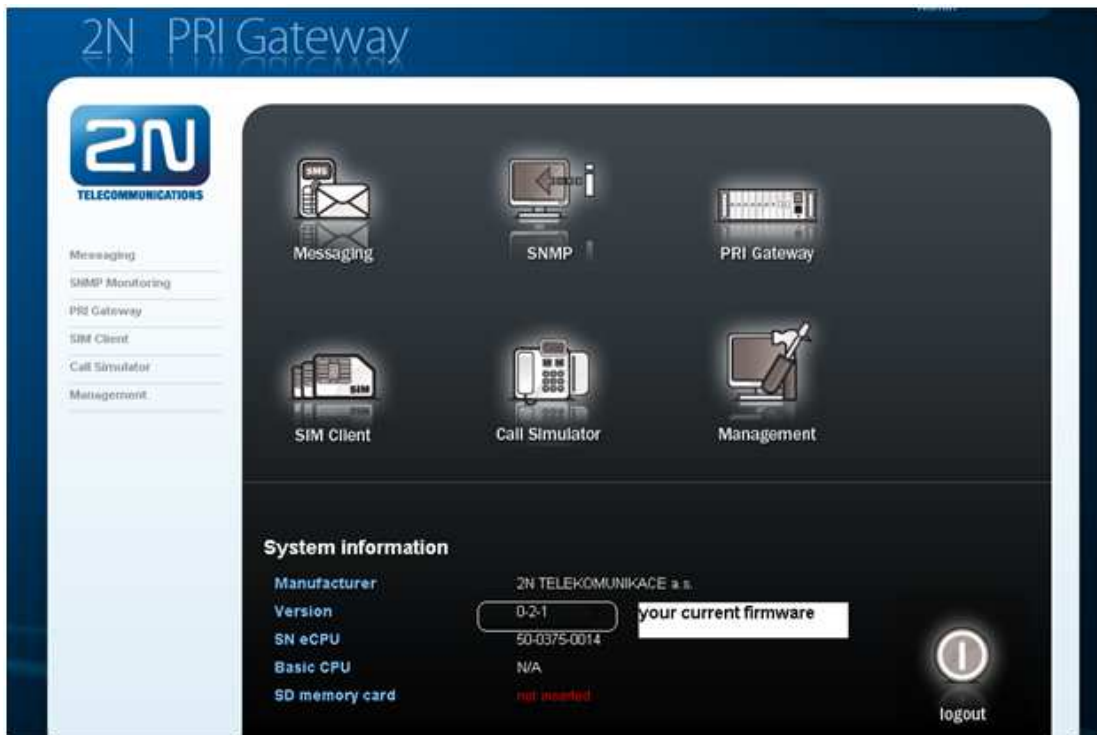

Go to the menu Management → Firmware





Find the latest firmware provided by 2N on your PC. And pres Update button at the bottom of the page. Wait till whole process is finished. It can take few minutes.